

ASUS DUAL GTX 1050Ti/1050 GPU Water Block

BS-ASD1050T-PA



Remove the red position screw

①




Remove the two screws on the side at the same time

①-②



Remove the original radiator , Clean up and reapply GPU core thermal grease

②

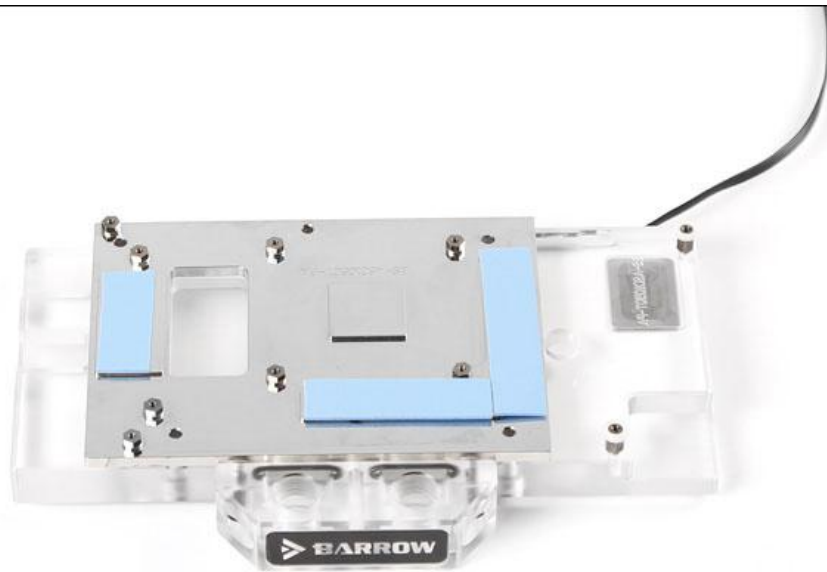

In the water block floor with good thermal grease

③



Attention to red position screw for installation drawing

④



installation is complete

⑤