





Priority removal of the successful red screw, put aside

①

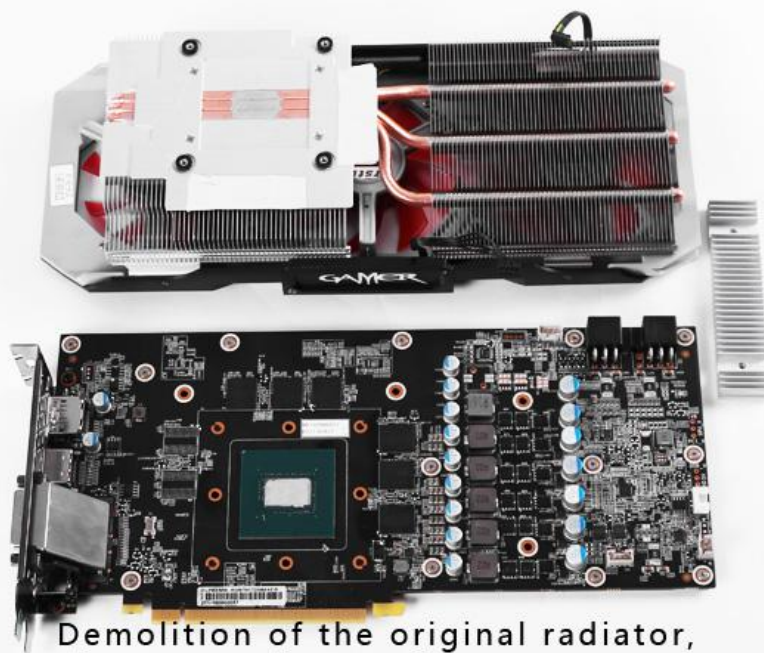

Demolition of the original radiator,
clean up and re apply grease

②

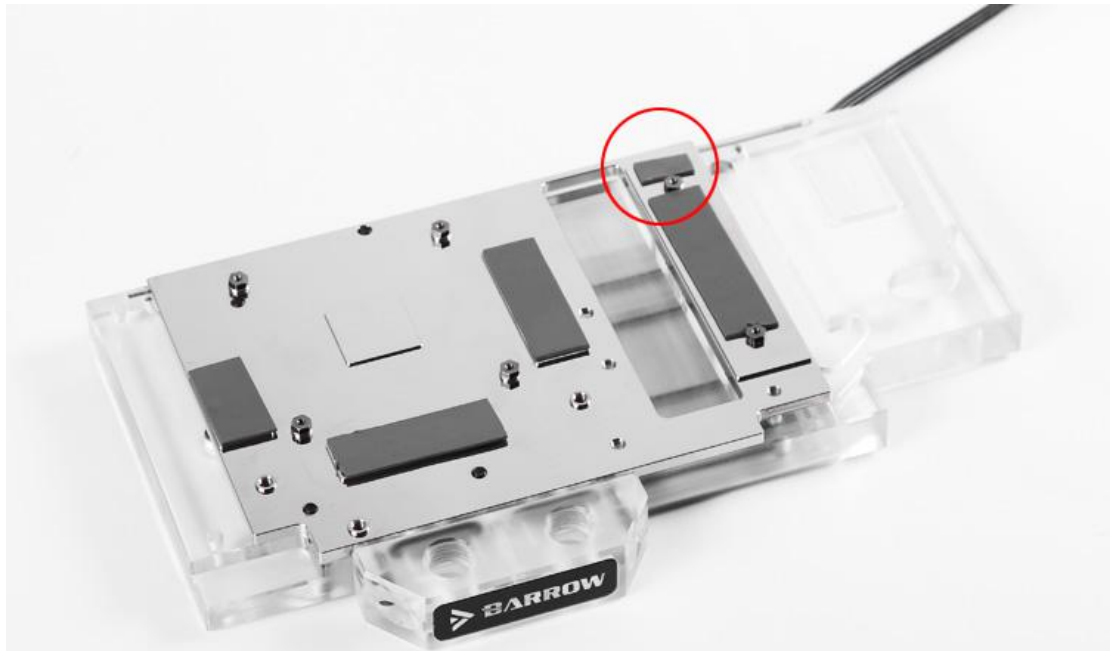

With good thermal grease, note the shear size. Special attention to the red position! ③



Installation drawing red screw

④



installation is complete

⑤