Install the tutorial of GPU Water Block(RTX2080TI-right inlet and outlet full cover GUP water block Aurora)Aurora
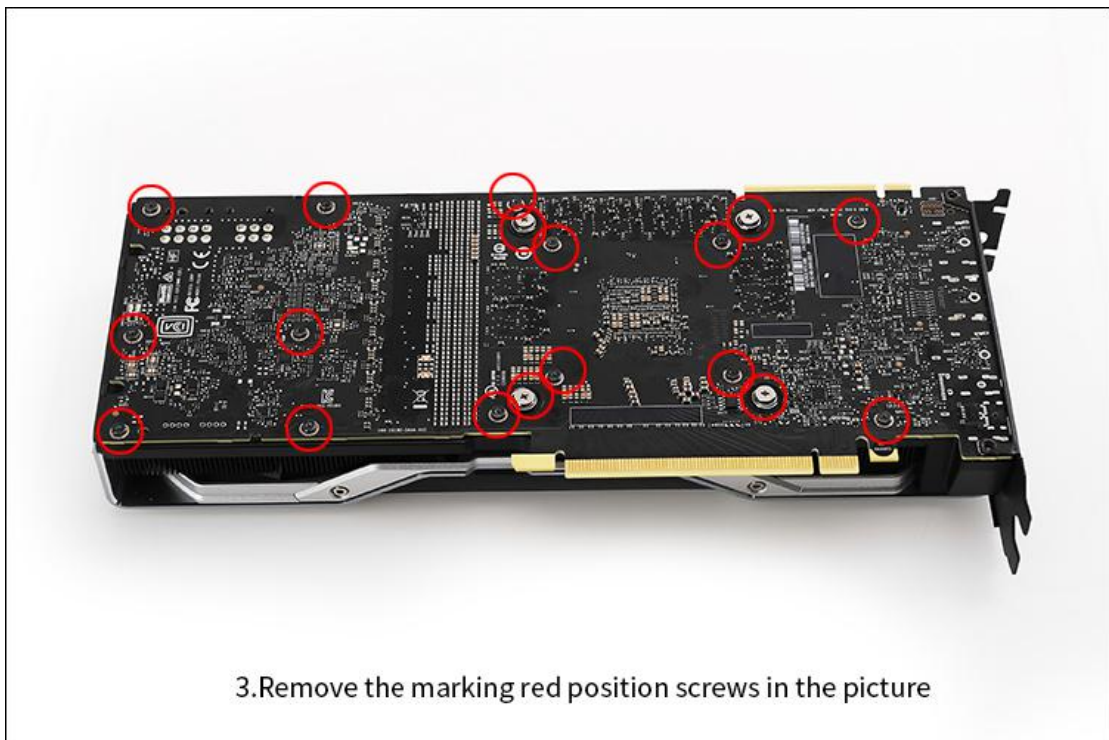
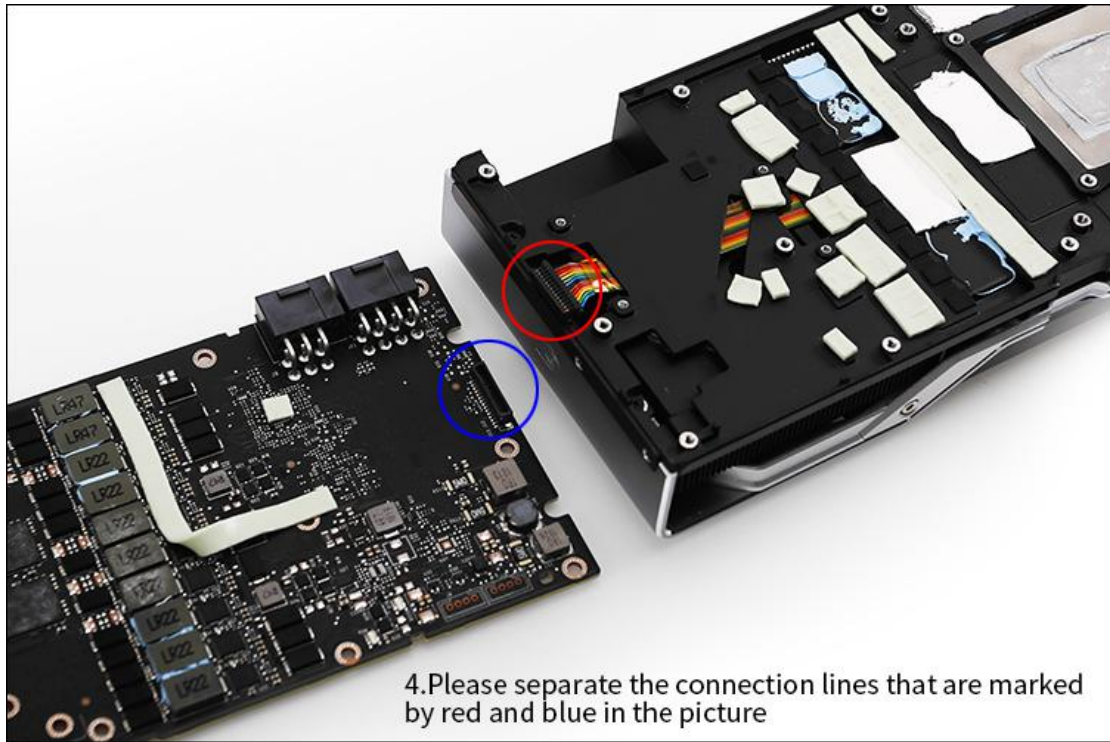安装教程(实例示范)
INSTALL TUTORIAL (DEMONSTRATION)

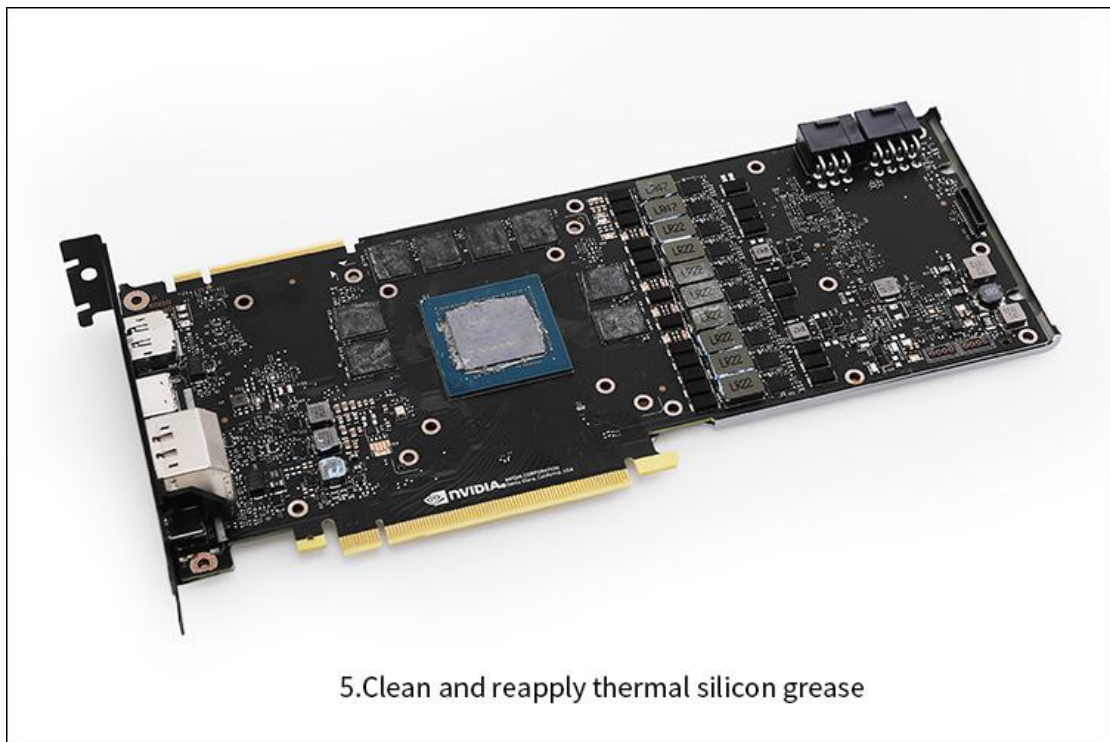1.Remove the marking red position screws in the picture

2.Remove the marking red position screws in the picture

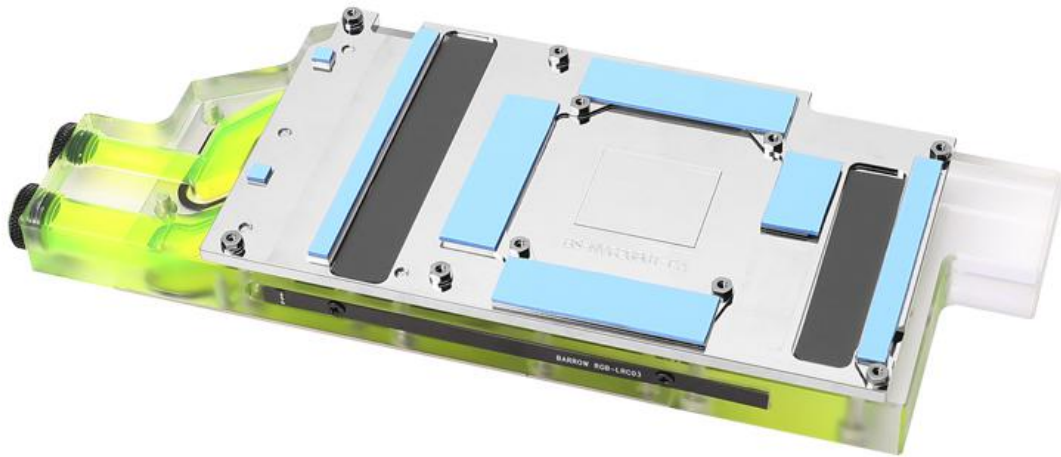3.Remove the marking red position screws in the picture

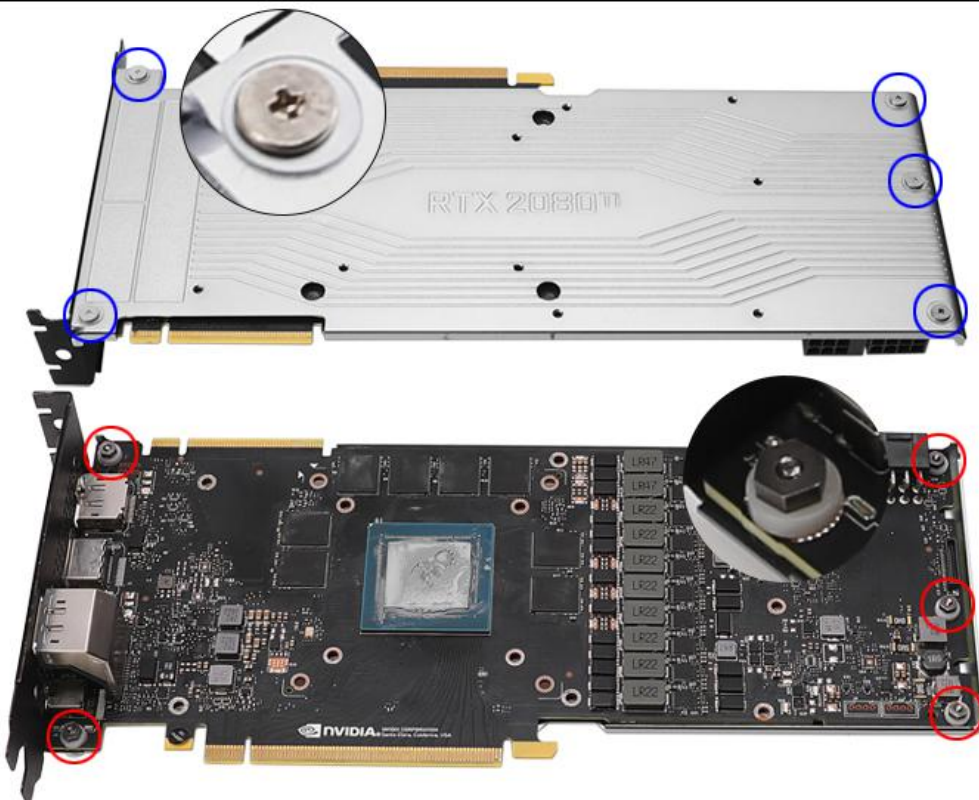4.Please separate the connection lines that are marked by red and blue in the picture
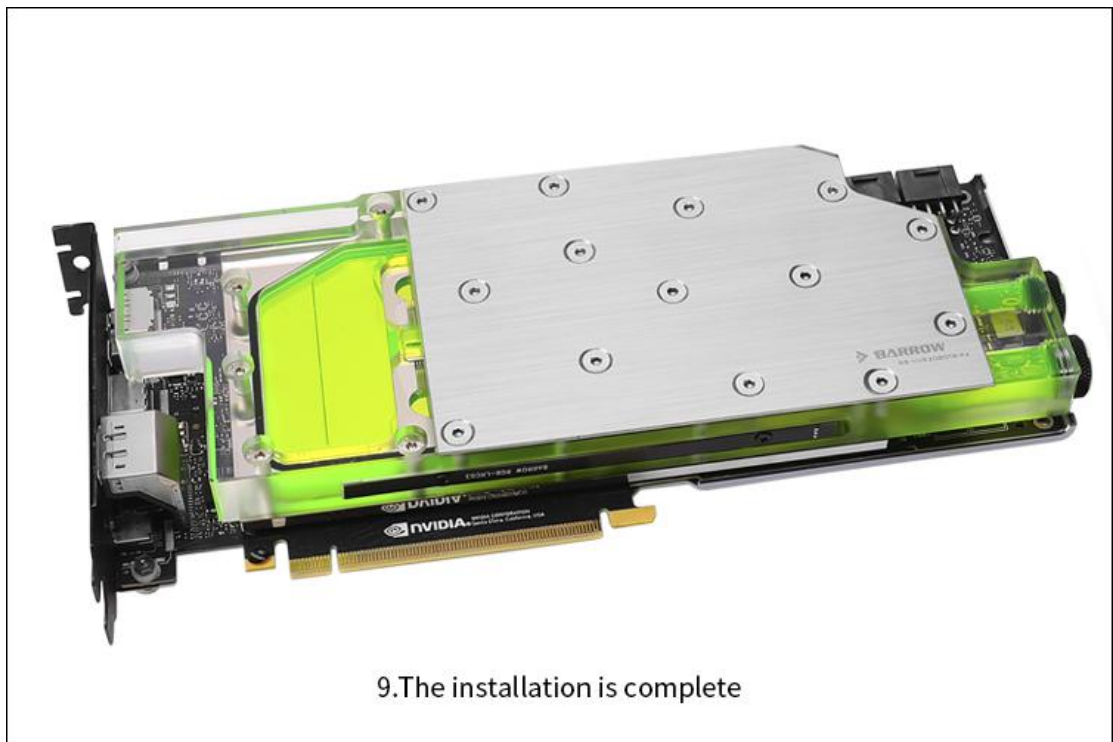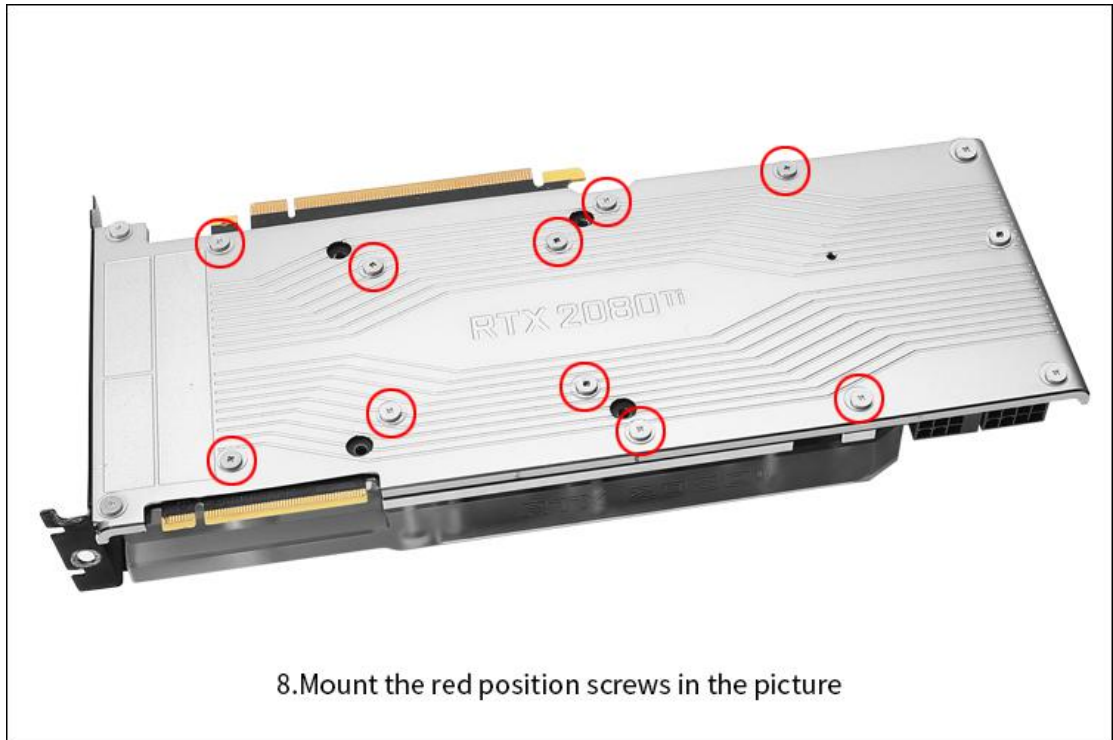
5.Clean and reapply thermal silicon grease

6.Stick the corresponding specifications of thermal grease in the corresponding position, paying attention to the cutting size
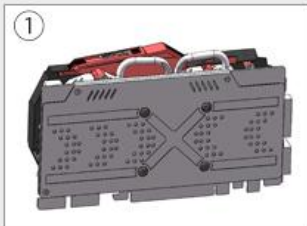

7.Use matching screws、 Nuts、 PC thin gasket and ABS thick gaskets.Tighten them as shown in the picture to complete the installation of the back plate、 baffle and PCB

8.Mount the red position screws in the picture
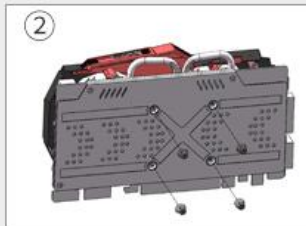

9.The installation is complete

DEMONSTRATION INSTALLATION TUTORIAL (DRAWING)

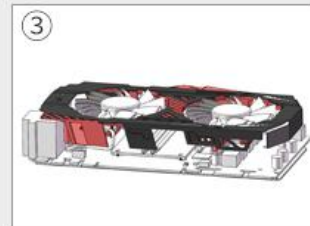## STEP 1: REMOVE ORIGINAL RADIATOR

THE FIRST STEP: ORIGINAL RADIATOR REMOVED THE FIRST STEP: ORIGINAL RADIATOR REMO
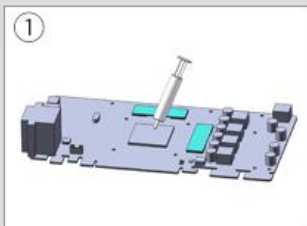
①
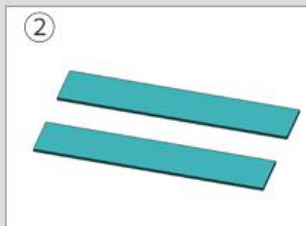
Original GPU

②

Unscrew the GPU backplane screws

③

Remove the original fan power cable along with the original radiator
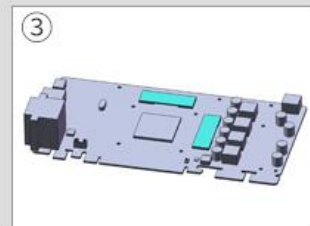
STEP 2: APPLY GREASE/STICK SILICON PAD

THE FIRST STEP: ORIGINAL RADIATOR REMOVED THE FIRST STEP: ORIGINAL RADIATOR REMOVEDAL RADIAT

①

Clean up the residual grease on the circuit board and the chip,then re apply a thin layer ones .
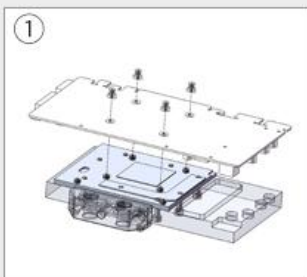
②

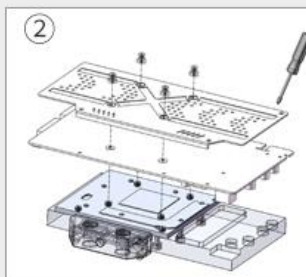Cut the thermal gel pad into the appropriate size

③

Stick them to the GPU heat chips
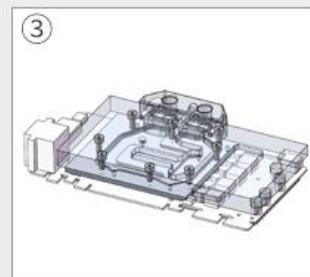
STEP 3: INSTALL WATER BLOCK

THE FIRST STEP: ORIGINAL RADIATOR REMOVED THE FIRST STEP:

①

Put the GPU water block backplane screws on the GPU screw holes and make sure they are at the correct spot.

②

the GPU backplane hole fit to the water block base hole, then lock by screws

③

Done

* Note:
If the GPU backplate is not installed, please place the insulation gasket on the mounting hole and lock it with a spring screw.This is general installation demonstration tutorial.The specific installation details may be slightly different depend on the GPU cards,in kind prevail.